

G-70 Version 2.02 Updating Instructions

LOADING THE G-70 UPDATING DATA PRESERVING YOUR USER DATA (WINDOWS)

For Operating System(s): WindowsXP / WindowsME / Windows2000 / Windows98SE

The complete Update operation takes about 5 minutes. Though your user data are preserved during the update, we recommend that you make a backup to avoid damaging your data in case something goes wrong. Before starting the update procedure, make sure that the "Internal Protection" switch (on the G-70 rear panel) is set to "OFF" position (unlocked position).

Loading Update Data into the G-70

1. Connect the G-70's USB port to your computer.
2. If a memory card is connected to the G-70's PCMCIA slot, or if a floppy disk is inserted in the drive, remove it before proceeding.
3. Press [MENU] > [USB DATA STORAGE] > [INTERNAL MEMORY]. As soon as the connection has been established, the G-70's display shows "CONNECTED" (USB DATA STORAGE page).
4. On your computer, open the "My Computer" window. Locate the "Removable Disk" entry. It refers to the G-70's internal memory.
5. Download from www.rolandkeyboardclub.com the file "G70_Ver_02_02.zip" and unzip it in your computer.
6. Drag & drop the "G70_Ver_02_02.sys" file into the "Update" folder located in the Removable Disk (i.e. the G-70's Internal Memory).
7. When the file have been copied, terminate the USB connection using the tray icon at the right of your computer's tool bar. The tray icon related to the USB connection looks like a green arrow on top of an electronic device. Leave the mouse pointer on this icon and wait for the "Safely remove hardware" message to appear.
8. Using the left mouse button, double-click this icon to open a window that lists all hardware devices that are currently connected to that USB port. Select "USB mass storage device" and check at the bottom whether the description refers to your G-70 ("G-70 mass storage device").
9. Click "Disconnect," and in the next window "OK." Wait until a message informs you that you can disconnect the hardware.
10. Click "OK" to close this window. On the G-70, press the [EXIT] button or [DISCONNECT] field. Disconnect the G-70's USB port from your computer and switch off the G-70.

Updating to OS 2

11. Hold down the [DISK&MEDIA] button to the lower left of the display while switching on the G-70.
Keep holding that button until the "SYSTEM UPDATE" message appears.

12. Press the [1] button in the G-70's USER PROGRAM section. The G-70 starts loading the OS 2 system software. When all data have been loaded, the "Power Off and Power On again" message appears.

Switch off the G-70, wait a moment, then switch it on again.

LOADING THE G-70 UPDATING DATA PRESERVING YOUR USER DATA (MACINTOSH)

For Operating System(s): MacOSX / MacOS

The complete Update operation takes about 5 minutes. Though your User data are preserved during the update, we recommend that you make a backup to avoid damaging your data in case something goes wrong. Before starting the update procedure, make sure that the "Internal Protection" switch (on the G-70 rear panel) is set to "OFF" position (unlocked position).

Loading Update Data into the G-70

1. Connect the G-70's USB port to your computer.
2. If a memory card is connected to the G-70's PCMCIA slot, or if a floppy disk is inserted in the drive, remove it before proceeding.
3. Press [MENU] > [USB DATA STORAGE] > [INTERNAL MEMORY]. As soon as the connection has been established, the G-70's display shows "CONNECTED" (USB DATA STORAGE page).
4. Download from www.rolandkeyboardclub.com the file "G70_Ver_02_02.zip" and unzip it in your computer.
5. Drag & drop the "G70_Ver_02_02.sys" file into the "Update" folder located in the "G70_SSD" (i.e. the G-70's Internal Memory). You can find the G70_SSD icon on your computer's desktop.
6. Drag the "G70_SSD" icon to the Trash (or use the equivalent shortcut). Wait until the icon has disappeared from your desktop.
7. On the G-70, press the [EXIT] button or [DISCONNECT] field.
8. Disconnect the G-70's USB port from your computer and switch off the G-70.

Updating to OS 2

9. Hold down the [DISK&MEDIA] button to the lower left of the display while switching on the G-70. Keep holding that button until the "SYSTEM UPDATE" message appears.
10. Press the [1] button in the G-70's USER PROGRAM section. The G-70 starts loading the OS 2 system software. When all data have been loaded, the "Power Off and Power On again" message appears. Switch off the G-70, wait a moment, then switch it on again.